



Maintenance after use | CCU 10 | 26677

Page 1 of 2

Maintenance recommendations:

After use (every time)

- **Wear full protective gear during maintenance.**
- **Always act according to the safety instructions as supplied with each tool!**

Necessary equipment: Teflon lubrication oil, WD40, soft cloth.



### Step 1

- Check:
  - Its general condition
  - Oil leakage
  - Damages that can interfere with functioning or safety
  - Dirt: clean if necessary
  - Readability of the identification / safety label, replace if unreadable



### Step 2

- Check the proper functioning of the control slide and push button
- Check:
  - whether the control slide moves smoothly
  - whether the push button moves smoothly
  - returns in neutral position
  - the blades move according the control symbols
  - the blades move smoothly


Holmatro Rescue Equipment B.V. | P.O. Box 33 | 4940 AA Raamsdonksveer, the Netherlands | T +31 (0)162 589200 | rescue@holmatro.com | [www.holmatro.com](http://www.holmatro.com)

While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. N.V. Holmatro and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro. Nothing from this printed matter can be copied and/or made public in any way without the explicit authorization of Holmatro.



### Step 3

- Check if the LED is working.
- Check the blades for damage. Replace if necessary.
- Spray a little WD40 on the blades to prevent corrosion.

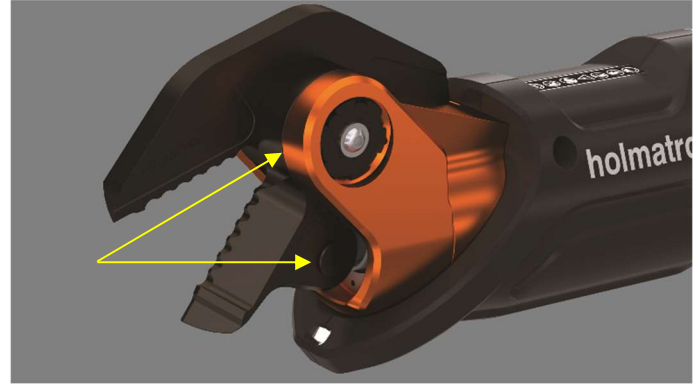

### Step 4

- Clean the hinges and grease them with Teflon oil. (also the opposite sides)
- Check the snap ring of the hinge pin for damage:
  - Damaged
  - Corroded
  - Worn down



### Step 5

- Check if the battery connectors are clean, free from corrosion and undamaged



### Step 6

- Check if the battery is fully charged
- Check that the blades are opened 5 mm.