

# POLYTAC® LED

## **Operating Instructions:**

Use the push button tail cap to turn your PolyTac® LED on and off. The push button tail cap can also be used in a momentary mode that provides light without placing the switch in the "on" position.

## **Battery Replacement:**

1. Unscrew the tail cap and remove expired batteries.
2. Replace, positive end first with two (2) 3 Volt Lithium batteries. Carefully observe correct polarity. Do not put in backwards, mix old and new cells or types.
3. Replace tail cap.

## **WARNING: FIRE, EXPLOSION, BURN HAZARD - USE ONLY RECOMMENDED LITHIUM BATTERIES**

Inferior quality lithium batteries can cause fire, explosion, burns. We recommend the use of ONLY Streamlight or Panasonic, Sanyo, Energizer and Duracell batteries in our products. Use of other batteries or mixing brands and old and new batteries may risk leakage, fire, explosion and serious personal injury. To further avoid this risk for any brand lithium battery, do not recharge, misuse, short-circuit, disassemble, improperly store or discard or expose to high temperatures.

**CAUTION - LED RADIATION (RG-2)  
DO NOT STARE INTO BEAM  
MAY BE HARMFUL TO EYES**

## **Streamlight Limited Lifetime Warranty:**

Streamlight warrants this product to be free of defect for a lifetime of use. We will repair, replace or refund the purchase price, at our option, of any Streamlight product that does not work or that you manage to break for as long as you own it. Of course, this limited lifetime warranty excludes abuse and batteries. Please return your Streamlight flashlight to the factory to take advantage of this warranty.



Streamlight, Inc.  
30 Eagleville Road  
Eagleville, PA 19403-3996  
Telephone: 800-523-7488