3019 Alvin DeVane Blvd. Ste. 560 Austin, TX 78741

Phone: (650) 965-8020

## **Setcom GTE Radio Cable**

Harris M7300, M5300, XG-100M, XG-25M, XG-75M

## **Installation Information**

Radio Interface for 44-Pin I/O Connector on Harris M7300, M5300, XG-100M, XG-25M, XG-75M Mobile Radio's (Direct Connect - No Option Cable)

Radio must be programmed for PTT on INP1 (Pin 18).

From Service Manual - MM-012137-001, Rev. K pg. 94:

For ECP, configure via the "Auxiliary Input 1" in Radio Personality Manager's (RPM's) External I/O dialog Box.

XG-25M must also be programmed to enable external speaker via Radio Personality Manager:

"To support the external speaker, the radio must have the EXT SPKR (External Speaker) function programmed to a radio button and/or menu. With this programming, the external speaker can be toggled on and off by pressing the button programmed with this function, or by selecting the function on a menu. When the external speaker is on, the radio's internal speaker remains off/ disabled."





