





MX3

Dispenser Loading Instructions


- 1** Open Test Strips
Keep base tilted up to prevent strips from sliding out.

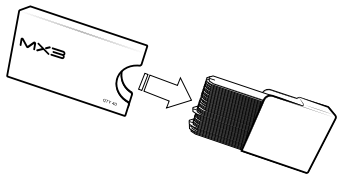


- 2** Open Dispenser

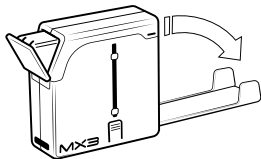


- 3** Push Down Spring Until it Locks

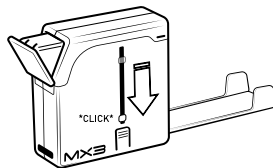


- 4** Insert Test Strips at Upward Angle

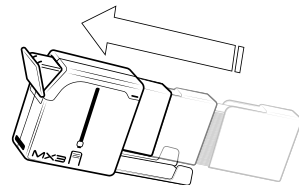


- 5** Tilt Dispenser Up, Allowing Test Strips to Slide into Dispenser

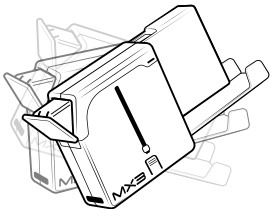

- 6** Remove Test Strip Holder

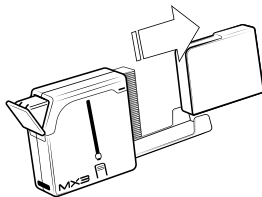

- 7** Close Dispenser

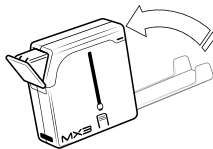

- 8** Push Tabs to Release Spring

