




Table of Contents

Kappler Overview - Made In The USA
Choosing The Right Suit
Fabrics, Seams, Styles
HazMatch® Suit Selection Guide
Standard Styles
NFPA Styles
NFPA Overview
ProVent® Biohazard & General Protection1
Zytron® Chemical Protection
Zytron 100 & 100XP1
Zytron 2001
Zytron 3001
Zytron 4001
Zytron 5002
Frontline®Chemical/FR Protection
Frontline 3002
Frontline 500
Accessories & Specialty Products2
Kappler Custom Solutions2
Technical Data3
Kappler Resources & Support3

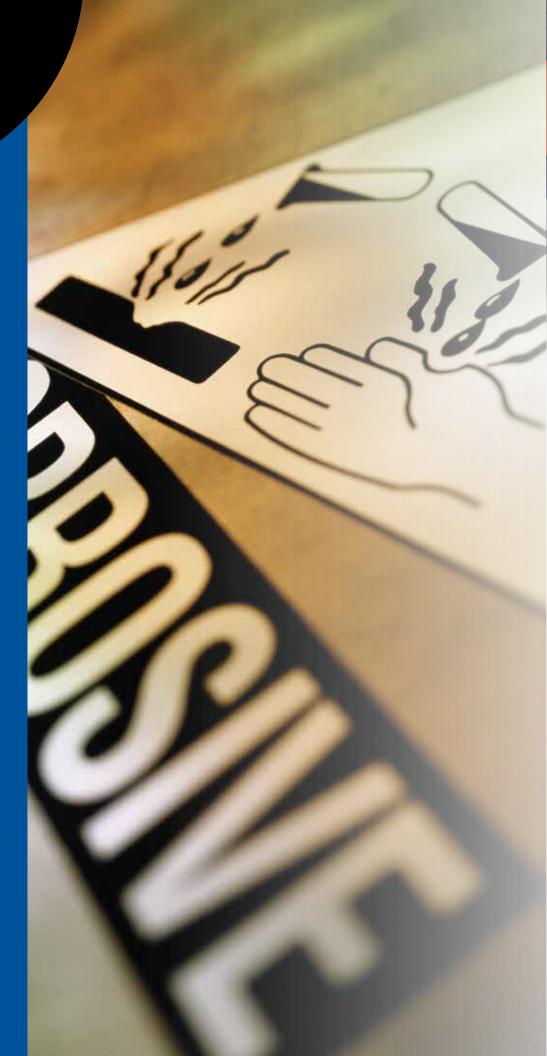

The Sign Says Danger. The Suit Says Kappler.

Relax.

It takes a lot of confidence to put your brand on a gas-tight suit. It's a promise of protection we don't take lightly. But from chemical-flash garments to biohazard coveralls, we're the first to tell you:

It's not just the suit.

It's knowing it's the right suit, made from the right fabric, with the right seam. With test data that confirms all of the above. It's also knowing something about the people behind the technology that makes the protection possible in the first place.

For more than four decades Kappler has led the industry with patented technology and proven garment designs. And we've built a reputation for quality, innovation and straightforward advice on what to wear. Today more than ever, the Kappler brand on your protective garment means you always know

what you're getting into.



Made In America Worn All Over The World

When George Kappler founded Kappler, Inc. on April 1, 1976, there were eight employees and six sewing machines. Today, the company is a respected global leader in chemical protective apparel. With George still active in the business and daughter Laura Kappler-Roberts serving as President and CEO, Kappler continues to grow as a certified Woman Owned Small Business.


During a challenging period in the early days, George Kappler wanted employees to guard



against complacency.
As a reminder to stay
focused, he posted a
sign that said "The Wolf
Is Always At The Door."
Over the years the wolf

became an unofficial mascot for the company, appearing on Christmas cards and other items. Much like the wolf itself, Kappler has overcome various threats to not only survive, but thrive. Known for its intelligence and survival instinct, the wolf also exhibits a nurturing side in taking care of the pack. For us, the pack is more than employees – it's also our customers, vendors, technical partners and many other friends. We look forward to many more years



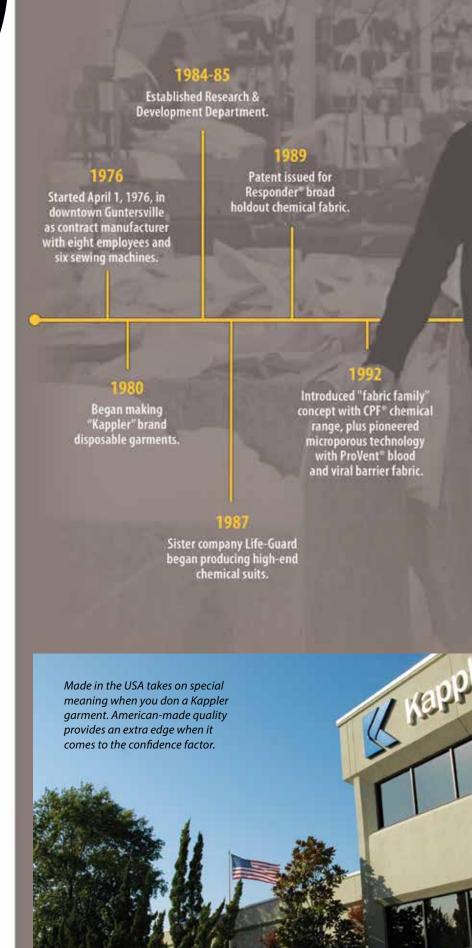

1993 **Established Kappler Engineered Specialty** Fabrics division.

Following no-compete period

with DuPont, re-entered market with Zytron® chemical protective products, plus introduced HazMatch® selection tool.

Introduced Expanded View AntiFog Visor System for gas-tight suits.

Certified as a Woman Owned

Small Business (WOSB).

1997

Introduced patented ChemTape® plus Suit Smart® protective apparel selection software.

1995-96

Introduced Reflector

chemical flash-fire

fabric, and launched

Pro/Shield proprietary

industrial range.

Introduced ChemScan QR Code garment labels, 2N1" Glove, and mobile app version of HazMatch®.

Reflector certified as first single skin" NFPA 1991 chemical flash-fire suit. NexGen® revolutionized industrial market with microporous technology.

Opened Kappler Museum & Visitors Center to mark 40th Anniversary.

with first three-way protection for chemical, flash-fire and thermal protection; Frontline 500 certified to NFPA 1991.

Introduced Frontline fabric family

2008-10

Tested, Proven And Made Right – Right Here in the USA.












Suit Selection **Made Simple**

3 steps to the right suit.

All Kappler garments are multi-use, single-exposure apparel. Follow these steps to ensure the right protection – or just use HazMatch, Kappler's Protective Clothing Selection Guide.

ProVent® see pages 10-11





Select a fabric.

Find a fabric proven against your hazard - a complete list of chemicals tested can be found on the HazMatch app or online at hazmatch.com.











Serged

Produced when three threads are interlocked around the edges of two pieces of fabric. For particulates plus residual liquids to light splash where no skin hazard is involved.



Bound

Produced with two pieces of fabric joined by a piece of binding, then stitched through all layers. For particulates plus residual liquids to



light splash where skin hazard is involved, and moderate splash for non skin hazards.

Partial Body

Aprons/Labcoats

Coveralls

Pick your design.


Choose the seam.

The right seam ensures your

garment is constructed to

match your specific hazard.

Many styles are available in the garment types shown here. See a complete list at kappler.com.







HazMatch®. The app is free, the data priceless.

HazMatch® is our easy-to-use selection tool that helps you make informed decisions about protective apparel. Search by chemical or by fabric, and save results to meet OSHA Hazard Assessment requirements. Download the free app or use it online at hazmatch.com – it's fast, easy, free, and only from Kappler.



Frontline® see pages 22-25





Heat Sealed/Taped

A strong, gas-tight seam produced when a serged seam is covered with seam tape, then sealed with heat or adhesive. For particulates, moderate


vapor hazards.

to heavy splash for skin hazards, and

Ultrasonic


Two fabric pieces are ultrasonically welded to create a seam with no needle holes. An Ultrasonic/Taped seam is available for additional strength.

For particulates and light to moderate liquid splash.




Splash Suits

Splash/Vapor Encapsulating Suits





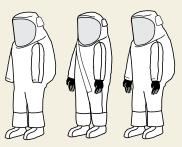

Kappler Custom

And Special Services

Kappler offers design options for any situation. See page 29.

Standard Styles

age 29 Describes **Custom Options**

Contact customer service for ProVent 6000BC Styles.

Sleeves and Shoe/Boot Covers - ProVent® and Zytron® Fabrics



Elastic at Both Ends

ProVent 7000 Serged – P7S501 One Size 18", White 100 prs/cs, 6 lb / 2.7 kg



Knee-High, Hook and Loop Ankle Fastener, Elastic at Top, 2-Ply Sole

ProVent 10,000 SM-XL. Blue or White 50 prs/cs, 11 lb / 5 kg



Knee-High, Elastic at Top and Ankle

ProVent 7000 Ultrasonic - 10423 NS Gray Skid Resistant Bottom One Size, White 50 prs/cs, 5 lb / 2.3 kg



Knee-High, Elastic Top

Zytron 200 Bound – Z2B017 One Size, Gray 100 prs/cs, 18 lb / 4.1 kg

Gowns, Lab Coats and Shorts - ProVent and Zytron Fabrics



Wrap-Around Gown, Two Neck Ties, Two Waist Ties Knit Cuffs, Non-Sterile

> ProVent 7000 Serged – LS112 2H XS-5X. White 30/cs, 16 lb / 7.2 kg



Wrap-Around Gown, Hook and Loop Neck Closure Two Waist Ties, Knit Cuffs, Non-Sterile

> ProVent 7000 Serged – LS101 XS-5X, White 30/cs, 15 lb / 6.8 kg

ProVent 10,000 XS-5X. Blue or White 30/cs, 18 lb / 8.2 kg



Wrap-Around Gown, Two Neck Ties and Two Waist Ties, Elastic Wrists, Non-Sterile

> ProVent 7000 Serged – LS112 XS-5X, White 50/cs, 17 lb / 7.7 kg



Open Back Gown, Hook and Loop Neck Fasteners, Waist Ties, Knit Cuffs, Non-Sterile

> ProVent 10,000 Ultrasonic – MN108 XS-5X. Blue or White 30/cs, 16 lb / 7.2 kg



Full Cut, 5-Snap, Collar

ProVent 7000 Serged — P7S210 No Pockets XS-5X, White 30/cs, 8 lb / 3.6 kg

Serged – P7S212 With Pockets XS-5X, White 30/cs, 8 lb / 3.6 kg



Full Cut, 6-Snap Front or Zipper Closure, Knit Collar and Cuffs, 3 Sewn-on Pockets

(1 Breast and 2 Hip) ProVent 10,000 Serged — MS235 Snap closure

XS-5X, Blue or White 30/cs, 18 lb / 8.2 kg Serged - MS225 Zipper closure XS-5X, Blue or White

30/cs, 18 lb / 8.2 kg



Modesty Shorts, Elastic Waist

ProVent 7000 Serged – LS810 XS-5X, White 100/cs, 9 lb / 4.1 kg

Total Encapsulating Suits - Zytron and PVC Fabrics





Splash Total Encapsulating Suit

Rear Entry, Expanded Back or Flat Back, Large PVC Visor, 1 Exhaust Port, Elastic Wrists, Attached Sock Booties with Splash Guards, Single Heat Sealed/Taped Seams, Double Storm Flaps with Hook and Loop Fasteners, Cloth Zipper

Zytron 200 Rear Entry, Bound

Z2B571 — Expanded Back XS-5X, Gray • 6/cs, 15 lb / 6.8 kg

Rear Entry, Heat Sealed/Taped Z2H571 - Expanded Back XS-5X, Gray • 6/cs, 19 lb / 8.6 kg

Rear Entry, Bound Z2B371 — Flat Back, Side Air Inlet XS-5X, Gray • 6/cs, 11 lb / 5 kg

Rear Entry, Heat Sealed/Taped **Z2H371** — Flat Back, Side Air Inlet XS-5X, Gray • 6/cs, 12 lb / 5.4 kg

Zytron 300

Rear Entry, Heat Sealed/Taped Z3H571 — Expanded Back XS-5X, Tan • 6/cs, 20 lb / 9 kg

Rear Entry, Heat Sealed/Taped Z3H371 — Flat Back, Side Air Inlet XS-5X, Tan • 6/cs, 14 lb / 6.4 kg

Zytron 400

Rear Entry, Heat Sealed/Taped Z4H571 — Expanded Back XS-5X, Green • 6/cs, 22 lb / 10 kg

Rear Entry, Heat Sealed/Taped Z4H371 — Flat Back, Side Air Inlet XS-5X, Green • 6/cs, 16 lb / 7.2 kg

Zytron 500

Rear Entry, Heat Sealed/Taped, Expanded View AntiFog Visor System Z5H573 — Expanded Back XS-5X, Orange or Charcoal 1/cs, 7 lb / 3.2 kg

Rear Entry, Heat Sealed/Taped, Expanded View AntiFog Visor System **Z5H373** — Flat Back, Side Air Inlet XS-5X, Orange or Charcoal 1/cs, 7 lb / 3.2 kg





Vapor Total Encapsulating Suit

Front Entry or Rear Entry, Expanded Back or Flat Back, Expanded View AntiFog Visor System, 2 Exhaust Valves, 48" Gas-Tight Urethane Zipper, Double Storm Flaps with Hook and Loop Fasteners, Attached Sock Booties with Splash Guards, Heat Sealed/Taped Seams, Field Replaceable Butyl Gloves. HazMat Styles Include 2N1° Glove System

Zytron 500

Front Entry, Heat Sealed/Taped Z5H552 — Expanded Back XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg

Rear Entry, Heat Sealed/Taped Z5H553 — Expanded Back XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg

Front Entry, Heat Sealed/Taped Z5H352 - Flat Back Must specify pass-thru option XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg

Rear Entry, Heat Sealed/Taped Z5H353 — Flat Back. Must specify pass-thru option XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg

HazMat Front Entry, Heat Sealed/Taped Z5H582 — Expanded Back Double Sealed Seams, Knee Reinforcements, 2N1® Glove System XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg

HazMat Rear Entry, Heat Sealed/Taped Z5H583 — Expanded Back Double Sealed Seams, Knee Reinforcements, 2N1® Glove System XS-5X, Orange or Charcoal 1/cs, 9 lb / 4.1 kg



Training Suit

Front Entry or Rear Entry, Expanded Back, Large PVC Visor, 1 Exhaust Port, 48" Zipper, Storm Flap with Hook and Loop Fasteners, Attached Sock Booties with Splash Guards, Serged Seams, Sewn On PVC Gloves

Zytron 500

Front Entry, Serged Z5S555 — XS-5X. Orange or Charcoal 1/cs, 7 lb / 3.2 kg

Rear Entry, Serged **Z5S556** – XS-5X, Orange or Charcoal 1/cs. 7 lb / 3.2 kg

PVC

Front Entry, Serged PVS555 — SM-4X Yellow 1/cs, 10 lb / 4.5 kg





12 Style

ProVent

Zipper Front, Collar

ProVent 7000 Serged - P7S412 No Flastic XS-5X, White 25/cs, 12 lb / 5.4 kg

Zytron

Zipper Front, Collar

Zytron 100 Serged - Z1S412 XS-5X, Yellow 12/cs, 12 lb / 5.4 kg

Bound - **Z1B412** XS-5X, Yellow 12/cs, 13 lb / 5.9 kg

Zytron 100XP Serged – Z1S412XP XS-5X, Blue 12/cs, 12 lb / 5.4 kg

Bound - Z1B412XP XS-5X. Blue 12/cs, 13 lb / 5.9 kg

Zytron 200 Bound - **Z2B412** XS-5X, Gray 12/cs, 15 lb / 6.8 kg

Heat Sealed/Taped - Z2H412 XS-5X, Gray 6/cs, 10 lb / 4.5 kg

Zytron 300 Heat Sealed/Taped — Z3H412 XS-5X, Tan 6/cs, 10 lb / 4.5 kg

> Note: Contact **Customer Service** for ProVent 6000BC available styles.



14 Style

ProVent

Zipper Front, Attached Hood and Skid Resistant Boots, Elastic Wrists and Face Opening

> ProVent 7000 Serged — P7S414 XS-5X, White 25/cs, 12 lb / 5.4 kg

Zytron

Hood and Boots, Zipper Front, Elastic Wrists and Face Opening

> Zytron 100 XS-5X Yellow 12/cs, 14 lb / 6.4 kg Bound - **Z1B414** XS-5X, Yellow 12/cs, 16 lb / 7.3 kg

Zytron 100XP Serged — Z1S414XP XS-5X, Blue 12/cs, 14 lb / 6.4 kg Bound - Z1B414XP 12/cs, 16 lb / 7.3 kg

Zytron 200 Bound – Z2B414 XS-5X, Gray 12/cs. 18 lb / 8.2 ka

Heat Sealed/Taped - Z2H414 XS-5X. Grav 6/cs, 9 lb / 4.1 kg

Zvtron 300 Heat Sealed/Taped - Z3H414 XS-5X. Tan 6/cs, 11 lb / 5 kg

Zytron 400 Heat Sealed/Taped — Z4H414 XS-5X, Green 6/cs, 11 lb / 5 kg



17 Style

ProVent

Zipper Front, Collar **Elastic Wrists and Ankles**

Serged — P7S417 Elastic Wrists and Ankles XS-5X, White 25/cs, 12 lb / 5.4 kg

Zytron

Zvtron 100 Serged – Z1S417 XS-5X, Yellow 12/cs, 11 lb / 5 kg Bound - Z1B417 XS-5X, Yellow

12/cs. 11 lb / 5 ka

Zytron 100XP Serged — Z1S417XP XS-5X, Blue 12/cs, 11 lb / 5 kg Bound - Z1B417XP XS-5X, Blue

> Zytron 200 Bound — **Z2B417** XS-5X, Gray 12/cs, 8 lb / 3.6 kg

12/cs, 11 lb / 5 kg

Heat Sealed/Taped — Z2H417 XS-5X, Gray 6/cs, 8 lb / 3.6 kg

Zytron 300 Heat Sealed/Taped – Z3H417 XS-5X, Tan 6/cs, 10 lb / 4.5 kg

Zytron 400 Heat Sealed/Taped — Z4H417 XS-5X, Green 6/cs, 14 lb / 6.4 kg

Zytron 500 Heat Sealed/Taped – Z5H417 XS-5X, Orange or Charcoal 3/cs, 7 lb / 3.2 kg



26 Style

Zytron

Zipper Front, LongNeck™ design with Extended Zipper Closure, Attached Hood, Elastic Wrists and Face Opening, Attached Sock Booties with Splash Guards

Zytron 200 led/Taped - Z2H426 CE Type 3 XS-5X, Gray 6/cs, 9 lb / 4.1 kg

Zytron 300 nled/Taped — **Z3H426** CE Type 3 6/cs, 11 lb / 5 kg

Zytron 400 Heat Sealed/Taped — Z4H426 CE Type 3 XS-5X, Green 6/cs, 11 lb / 5 kg

Zytron 500 Heat Sealed/Taped – Z5H426 CE Type 3, XS-5X, Orange or Charcoal 3/cs, 8 lb / 3.6 kg

Note: All Zytron Taped Seam Coveralls include LongNeck™ design with **Extended Zipper Closure**



28 Style

ProVent

Zipper Front with Storm Flap, Attached Hood, Elastic Back Waist, Elastic Wrists, Ankles and Face Opening

> ProVent 7000 Serged – P7S428 XS-5X, White 25/cs, 12 lb / 5.4 kg

ProVent 10,000 Serged— MSE38 CE Type 5,6 XS-5X, Blue or White 25/cs, 19 lb / 5.4 kg

Ultrasonic/Taped-MNH38 XS-5X. Blue or White 25/cs, 17 lb / 7.7 kg

Zytron

Zipper Front, LongNeck™ design with Extended Zipper Closure, Attached Hood, Elastic Wrists, Ankles and Face Opening

> Zvtron 100 Serged — Z1S428 XS-5X, Yellow 12/cs, 12 lb / 5.4 kg Bound - **Z1B428** XS-5X, Yellow 12/cs, 12 lb / 5.4 kg

Zytron 100XP Serged – Z1S428XP XS-5X, Blue 12/cs, 12 lb / 5.4 kg Bound – Z1B428XP XS-5X, Blue 12/cs. 12 lb / 5.4 kg

Zytron 200 Bound - Z2B428 12/cs, 16 lb / 7.3 kg Heat Sealed/Taped - Z2H428 CE Type 3, XS-5X, Gray 6/cs, 9 lb / 4.1 kg

Zytron 300 Heat Sealed/Taped - Z3H428 CE Type 3 XS-5X Tan 6/cs, 10 lb / 4.5 kg

Zytron 400 Heat Sealed/Taped - Z4H428 CE Type 3 XS-5X Green 6/cs, 17 lb / 7.7 kg

Zvtron 500 Heat Sealed/Taped - Z5H428 CE Type 3 XS-5X, Orange or Charcoal

3/cs, 7 lb / 3.2 kg



29 Style

Frontline 300

Coverall with Special Design Hood Opening for better fit against Respirator and Visor, LongNeck™ design with Extended Zipper Closure, **Double Storm Flaps** with FR Hook and Loop Fasteners, Glove Cone

Inserts. Seams are Heat Sealed/Taped F3H429 CE Type 3, XS-5X, Silver 2/cs, 9 lb/ 4.1 kg



36 Style

Frontline 300

Coverall with Special Design Hood Opening for better fit against Respirator, LongNeck™ design with Extended Zipper Closure, Double Storm Flaps with FR Hook and Loop Fasteners, Glove Cone Inserts. Attached Sock Booties with Splash Guards. Seams are Heat Sealed/Taped

> F3H436 CE Type 3, XS-5X, Silver 2/cs, 9 lb/ 4.1 kg

ProVent

Zipper Closure with Storm Flans, Attached Hood, Elastic Back Waist, Wrists and Face Opening, Attached Skid Resistant Shoe/Boot Covers

ProVent 10.000 Serged — MSE36 XS-5X, Blue or White 25/cs, 13 lb / 5.9 kg

Ultrasonic/Taped Double Storm Flaps — MNH36 XS-5X, Blue or White 25/cs. 13 lb / 5.9 kg

Kappler Style Number System

Seam Type

Specific Garment ID

Fabric Family & Specific Fabric

Additional Detail (example indicates NFPA 1991 Certified)

Fabrics

P - ProVent 6000 and 7000

M - ProVent 10,000

(example indicates Zytron 500)

Z - Zytron

F - Frontline

Seam Types

S - Serged

B - Bound

H - Heat Sealed/Taped

N - Ultrasonic

Garment Types

1 - Gowns

2 - Lab Coats

3 - Flat Back Encapsulating Suits

5 - Expanded Back Encapsulating Suits

6 - Hoods, Jackets, Bib Trousers, Ensembles

Exceptions: Style number protocols vary for a few products, including Sleeves, Shoe/Boot Covers, Accessories, and ProVent 10,000 coveralls.

Ensembles - Frontline 300 Fabric

3-piece Ensemble

Jacket with Zipper Front, Double Storm Flaps with FR Hook and Loop Fasteners, Glove Cone Inserts.

Straps and Snap-Lock Fasteners.

Loop Fasteners and 40 mil PVC Visor, Seams are Heat Sealed/Taped.



2-piece Ensemble

Half-C Jacket with Expanded Back and Front Zipper, Double Storm Flaps with FR Hook and Loop Fasteners, 40 mil PVC Visor, Glove Cone Inserts.

Bib Trouser with Adjustable Webbing Straps and Snap-Lock Fasteners. Seams are Heat Sealed/Taped.

F3H620 - XS-5X, Silver, 1 set/cs, 8 lb/





F3H630 - XS-5X, Silver, 1 set/cs, 8 lb/3.6 kg

Jacket with Zipper Front, Elastic Wrists

Zytron 300 - Heat Sealed/Taped **Z3H670** – XS-5X, Tan, 6/cs, 7 lb / 3.2 kg

Zvtron 400 - Heat Sealed/Taped **Z4H670** – XS-5X, Green, 6/cs, 10 lb / 4.5 kg



Jackets, Bib Trousers and Hoods - Zytron Fabrics

Bib Trouser with Adjustable Webbing Straps and Snap-Lock Fasteners.

Zytron 300 - Heat Sealed/Taped **Z3H660** – XS-5X, Tan, 6/cs, 8 lb / 3.6 kg

Zytron 400 - Heat Sealed/Taped **Z4H660** – XS-5X, Green, 6/cs, 10 lb / 4.5 kg




Hood Waist Length Dickie with Hook and Loop Fasteners, PVC Visor

7vtron 300 - Heat Sealed/Taned **Z3H750** – One Size, Tan, 6/cs, 6 lb / 3.2 ka

Zytron 400 - Heat Sealed/Taped **Z4H750** – One Size, Green, 6/cs, 6 lb / 2.7 kg







NFPA Styles

Certified Apparel For Demanding Applications

NFPA Certified Garments - 1991-2016 Edition

Made with Frontline® 500 Fabric

Vapor Total Encapsulating Suit, Front Entry or Rear Entry, Expanded Back, Expanded View AntiFog Visor System, Double Heat Sealed/Taped Seams, Knee Reinforcements, 2 Exhaust Valves, 48" Gas-Tight Urethane Zipper, Double Storm Flaps with FR Hook and Loop Fasteners, Attached Sock Booties with Splash Guards, Field Replaceable 2N1° Glove System and Removable Knitted Kevlar Overgloves.



F5H582-91 (Front Entry), F5H583-91 (Rear Entry) F5H580-9C (CE Type 1aET) and F5H582-9Z (Reverse Pull Zipper) X5-5X, Silver 1/cs, 12 lb/5.4 kg

NFPA Certified Garments - 1992-2012 Edition

Made with Zytron® 300 Fabric

Splash Protective Coverall, Elastic Hood Opening with special design for better fit against respirator, with Attached Gloves. Heat Sealed/Taped Seams, Front Zipper extends diagonally across chest up into hood for easier donning/doffing. Urethane Zipper has Double Storm Flaps with Hook and Loop Fasteners. Sock Booties with Splash Guards. Boot Splash Guards have elastic edge. Z3H427-92 has permanently attached 2N1° Glove System. Z3H437-92 has Neoprene Gloves.



Splash Protective Total Encapsulating Suit, Front Entry or Rear Entry, Expanded Back, Expanded View AntiFog Visor System, AttachedNeoprene Gloves, Sock Booties with Splash Guards, 2 Exhaust Valves, Urethane Zipper has Double Storm Flapswith hook & Loop Fasteners.

Rear Entry, Heat Sealed/Taped **Z3H576-92**, XS-5X Tan, 6/cs, 9 lb / 4.1 kg

Front Entry, Heat Sealed/Taped **Z3H577-92**, XS-5X Tan, 6/cs, 9 lb / 4.1 kg



Made with Zytron® 500 Fabric

Vapor Total Encapsulating Suit, Front Entry with Expanded Back, Expanded View AntiFog Visor System, Double Heat Sealed/Taped Seams, Expanded View AntiFog Visor System, 2 Exhaust Valves, 48" Gas-Tight Urethane Zipper, Double Storm Flaps with Hook and Loop Fasteners, Attached Sock Booties with Splash Guards, Field Replaceable 2N1° Glove System and Removable Knitted Kevlar Overgloves.



Front Entry Z5HTN-C2, XS-5X* Orange or Charcoal 1/cs, 9 lb/4.1 kg



^{*} See sizing note on back cover of catalog.

A Handy Reference Guide To NFPA Apparel Standards.

The National Fire Protection Association (NFPA) develops, publishes and disseminates consensus codes and performance standards intended to minimize the possibility and effects of fire and other risks. Below is an overview of the NFPA standards that apply specifically to protective apparel, along with a list of our products certified to these standards. For additional information on NFPA or other technical issues, please contact Customer Service at 1-800-600-4019 or email customerservice@kappler.com.

NFPA Standards A Quick Guide

Overview of NFPA Standards							
	NFPA 1991 - 2016	NFPA 1992 - 2018	NFPA 1994 Class 1 - 2018	NFPA 1994 Class 2 - 2018	NFPA 1994 Class 3 - 2018	NFPA 1994 Class 4 - 2018	NFPA 1999
SCOPE	Hazmat Response Vapor	Hazmat Response Liquid	Chem/Bio Terrorism Incident Response Vapor	Chem/Bio Terrorism Incident Response Vapor	Chem/Bio Terrorism Incident Response Liquid	Chem/Bio Terrorism Incident Response Particle	Emergency Medical Services Single Use
CHEMICAL VS GARMENT FABRIC, SEAMS, VISORS, GLOVES, BOOTS	Permeation resistance 1 hr vs 21 industrial chemicals, 4 toxic industrial chemicals and warfare agents soman and mustard	Penetration resistance 1 hr vs 10 industrial chemicals	Permeation resistance 1 hr vs six toxic industri- al chemicals and agents mustard and soman	Permeation resistance 1 hr vs 5 toxic industrial chemicals and agents mustard and soman	Permeation resistance 1 hr vs 5 toxic industrial chemicals and agents mustard and soman		
CHALLENGE LEVEL	100 % concentration and full contact 100 g/m2 agents	100% concentration and full contact	Liquids 20g/m2 Gases 10000 ppm Closed Top Cell	Liquids 10 g/m2 Gases 350 ppm Closed Top Cell	Liquids 10 g/m2 Gases 40 ppm Open Top Cell		
BREAKTHROUGH CRITERIA	Cumulative Permeation 6.0 TIC's, 4.0 mustard, 1.25 soman	ASTM F 903 Visual liquid	Cumulative Permeation 6.0 TIC's, 4.0 mustard, 1.25 soman	Cumulative Permeation 6.0 TIC's, 4.0 mustard, 1.25 soman	Cumulative Permeation 6.0 TIC's, 4.0 mustard, 1.25 soman		
SYSTEM	ASTM F 1052 Pressure Test MIST Inward Leakage PDDF >488 ASTM F 1359 Shower Test >60min	ASTM F 1359 Shower Test > 20 min	ASTM F 1052 Pressure Test MIST PPDF > 441 ASTM F 1359 Shower Test > 60 min	MIST PDDF > 328 ASTM F 1359 Shower Test > 20 min	MIST PDDF > 69 ASTM F 1359 Shower Test >4 min	Particle Inward Leakage Test < 5 %	Shower Test > 8 min
FLAME RESISTANCE ASTM F 1358	Pass 3 second burn only Flash Option	Flash Option	Pass 3 second burn only Flash Option	Flash Option	Flash Option	Flash Option	
COMFORT Total Heat Loss Evaporative Resistance				Option	THL > 200 Ret < 30	THL > 450 Ret < 30	MTVR > 650 g/m@/24hr
VIRAL RESISTANCE ASTM F 1671 FABRIC/ SEAMS			Pass	Pass	Pass	Pass	Pass
COMPONENTS	Kevlar glove		Specify Respirator	Specify Respirator	Specify Respirator	Specify Respirator	
Kappler Products	Frontline® 500 F5H582-91 F5H583-91 F5H580-9C F5H582-9Z	Zytron® 300 Z3H426-92 Z3H427-92 Z3H428-92 Z3H437-92 Z3H576-92 Z3H577-92 Z3H579-92		Zytron® 500 Z5HTN-C2			

Provent[®] Biohazard And General Hazard Protection

ProVent 6000BC

ProVent 7000

Available in Blue or White
ProVent 10,000

Proven Microporous Technology – From Biohazard Scenarios To General Hazards.

- Patented ProVent 10,000 fabric passes both ASTM F1670 blood penetration and ASTM F1671 viral penetration tests.
- ProVent 10,000 fabric protects against Ebola and other biohazards. It is a patented microporous fabric with a high moisture vapor transmission rate (MVTR) for greater comfort.
- ProVent 10,000 Applications: Patient care and other healthcare settings, lab and diagnostic services, pharmacy work, autopsies, mortuary services.
- ProVent 7000 passes ASTM F1670 blood penetration test and offers excellent general hazard protection in a breathable fabric, while ProVent 6000BC offers Berry Compliant protection for general hazards.







New Guidelines from OSHA and the CDC OSHA and the CDC have issued a comprehensive

PPE guidance document for workers who may be exposed to potentially infected blood and body fluids. Details include:

- The guidance is in a matrix format and identifies the type and level of PPE performance.
- It includes protective gowns and coveralls, described as fluid resistant or impermeable.
- Fluid resistant garments are specified where the risk of exposure to blood and body fluids is low. Fluid resistant garments are defined as those with fabrics and seams that meet certain industry standards for liquid repellency.
- Impermeable garments are specified for scenarios with high exposure risk. Impermeable garment definition references industry standards and test methods for blood and viral penetration resistance under pressure.
- Protection is achieved by a system of components. In addition to protective apparel, a proper system includes respiratory protection consistent with OSHA 29 CFR 1910.134, plus eye and face protection, examination gloves, boot/shoe covers and over aprons.

For more details visit kappler.com.

HIV ~0.10 uM

HCV ~0.042 uM

Bloodborne pathogen size comparison.

EBOLA ~0.08 uM



ProVent 10,000 fabric is blue on one side, white on the other – garments may be ordered with either color on the outside (shown here in white).

Storm flap with pressure sensitive tape closure for additional protection.



Zytron[®] Chemical Protection

Zytron 100 Zytron 100XP

Two Excellent Fabric Choices For Dry Particulates To Light Splash.

- Ideal where workers need to be protected against hazardous particles or light chemical exposure.
- Excellent holdout against a range of common chemical hazards.
- Zytron 100XP offers greater fabric strength when needed.
- Bound seam styles include storm flap with pressure sensitive closure.
- Applications: Acid handling, tank cleaning, petrochemical operations, agrichemical mixing/applications.







Zytron 100 and 100XP Specific Chemicals Tested*

Chemical	Minutes		
Chemicai	100	100XP	
1,2-Dihydroxyethane	>480	>480	
Aqua Fortis	NT	>480	
Battery Acid	>480	>480	
Black Liquor	>480	>480	
Caustic Soda	>480	>480	
Chromic Acid	>480	>480	
Ethylene Glycol	>480	>480	
Formaldehyde	>480	NT	
Glutaric Dialdehyde	>480	>480	
Gluteraldehyde	>480	>480	
Green Liquor	>480	NT	
Hydrofluoric Acid 48%	>480	>480	
Hydrogen Peroxide	>480	NT	
Methylene Oxide	>480	NT	
Nitric Acid	NT	>480	
Orthophosphoric Acid	NT	>480	
Phosphoric Acid	NT	>480	
Potassium Cyanide	>480	NT	
Sodium Chloride Oxide	>480	NT	
Sodium Hydroxide	>480	>480	
Sodium Hypochlorite	>480	NT	
Sulfuric Acid	>480	>480	
White Liquor	>480	NT	

* Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. For detailed technical data and physical properties see page 30 or visit kappler.com.





ChemScan® labels – quick, accurate and only from Kappler. Scan the label with your phone's QR reader for a complete list of chemicals tested against your garment's protective fabric.



Zytron 200

When You Need More Strength And A Wider Range Of Protection.

- Offers protection from an expanded range of chemicals.
- Styles available with both bound and heat sealed/taped seams.
- Stronger fabric especially valuable where rip-out is a concern – offers greater physical strength for more demanding work applications.
- Applications: Chemical handling, petrochemical operations, hazardous material clean-up and remediation.







Zytron 200 Specific Chemicals Tested*

specific chemicals rested				
Chemical	Minutes			
Acetic Acid	>480			
Acetonitrile	52			
Acrylonitrile	65			
Aniline	>480			
Battery Acid	>480			
Benzene	36			
Caustic Soda	>480			
Chlorobenzene	38			
Crude Oil	>480			
Dimethyl Sulfate	>480			
Ethanol	>480			
Fuel Oil LS	>480			
Hydrofluoric Acid 48%	>480			
Hydrogen Peroxide	>480			
Jet Fuel A	>480			
Methanol	>480			
Methyl Acetate	330			
Methyl Bromide	59			
N,N-Dimethylformamide	77			
Nitric Acid	>480			
Nitrobenzene	97			
Phenol @43 C	287			
Potassium Hydroxide	>480			
Sodium Hydroxide	>480			
Sodium Hypochlorite	>480			
Sulfuric Acid	>480			
Trifluoroacetic Acid	>480			

^{*} Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. For detailed technical data and physical properties see page 30 or visit kappler.com.



Shown above are typical garment types for this fabric. View standard styles at kappler.com and see page 29 for custom options.

Hooded coverall styles feature LongNeck $^{\text{TM}}$ extended neck design.

Heat-sealed/taped garments (shown) come with double storm flaps, and bound seam garments come with a single storm flap.

Tingley HazProof® boots are available from Kappler as an authorized distributor.



ChemScan® labels – quick, accurate and only from Kappler.Scan the label with your phone's QR reader for a complete list of chemicals tested against your garment's protective fabric.

Zytron[®] Chemical Protection

Zytron 300

From Petro-Hazards To Warfare Agents, Zytron 300 Is A True Performance Fabric.

- Ideal for demanding applications with potential for chemical splash.
- Increased physical strength and broad chemical holdout take the protection level up a serious notch.
- · Available in seven NFPA certified styles.
- Excellent for petrochemical operations including chemical handling and maintenance work – a favorite for military operations.
- A real workhorse of the Zytron family, available in a wide range of garment types and styles.







Zytron 300 ASTM F1001 Chemical Test Battery* Minutes **Chemical** Acetone >480 Acetonitrile 87 Carbon Disulfide >480 Dichloromethane 70 Diethylamine >480 Dimethylformamide >480 **Ethyl Acetate** >480 n - Hexane >480 Methyl Alcohol 55 Nitrobenzene >480 Sodium Hydroxide >480 Sulfuric Acid >480 Tetrachloroethylene >480 Tetrahydrofuran >480 >480 Toluene Gases Ammonia Gas 39 1,3 Butadiene Gas >480 **Chlorine Gas** >480 **Ethylene Oxide Gas** 81 Hydrogen Chloride Gas >480 **Methyl Chloride Gas** >480

Chemical Warrare Agent Data"		
Chemical Agent	Minutes	Criteria
Bis (2-chloroethyl) sulfide (Mustard:HD)	>480	4.0 ug/cm2
Isopropyl methylfluorophosphonate (Sarin:GB)	>480	1.25 ug/cm2
Chlorovinyl arsinedichloride (Lewisite:L)	>240	4.0 ug/cm2
O-ethyl S-(2-diisopropylaminoethyl) methylphosphonothiolate (Nerve:VX)	>480	1.25 ug/cm2

* Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. **Chemical Warfare Agent testing was conducted in accordance with MIL-STD-282 and/or NFPA 1994-2001 with breakthrough times reported based on total cumulative permeation. For detailed technical data and physical properties see page 30 or visit kappler.com.






Zytron 400

A Real Tough Guy With Great Physical Properties, Plus Broad Chemical Holdout.

- ASTM F1001 chemical holdout performance similar to Zytron 500 at an economical price.
- Excellent physical properties give Zytron 400 an advantage in garment strength.
- Styles include a variety of coveralls plus total encapsulating suits and hood/jacket/trouser combos.
- Applications: Chemical handling, petrochemical operations, hazmat response and clean-up.

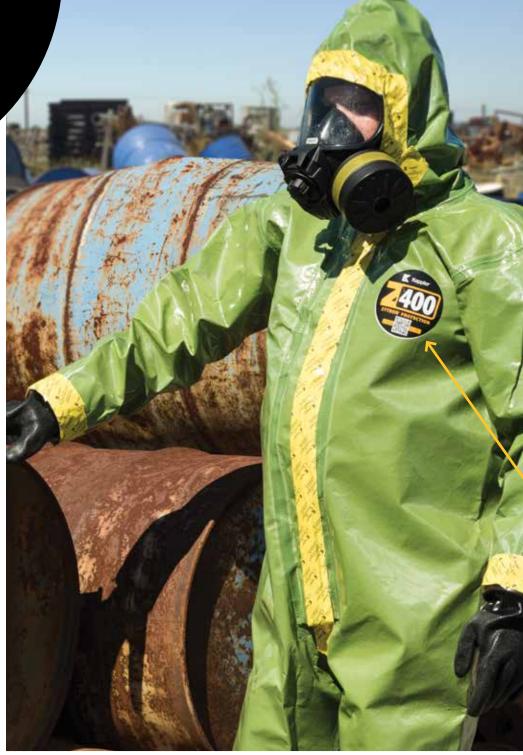





Zytron 400ASTM F1001 Chemical Test Battery* Chemical **Minutes** Acetone >480 Acetonitrile >480 Carbon Disulfide >480 Dichloromethane 88 Diethylamine >480 Dimethylformamide >480 **Ethyl Acetate** >480 n - Hexane >480 Methyl Alcohol >480 Nitrobenzene >480 Sodium Hydroxide >480 Sulfuric Acid >480 Tetrachloroethylene >480 Tetrahydrofuran >480 Toluene >480 Gases Ammonia Gas NT NT 1,3 Butadiene Gas **Chlorine Gas** NT **Ethylene Oxide Gas** 305 Hydrogen Chloride Gas NT **Methyl Chloride Gas**

* Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. For detailed technical data and physical properties see page 30 or visit kappler.com.



ChemScan® labels – quick, accurate and only from Kappler.

Scan the label with your phone's QR reader for a complete list of chemicals tested against your garment's protective fabric.





Available in Orange or Charcoal

Zytron 500

Top Level Protection For Demanding Hazmat Response.

- Greater than 8-hour holdout against hundreds of chemicals, with proven holdout against Chemical Warfare Agents (CWA).
- NFPA 1994 Class 2 2012 Edition style available.
- Many features and options in a wide variety of encapsulating suits and coverall styles.
- Available in hi-viz orange and charcoal gray.
- Applications: Hazmat response, chemical handling, refueling operations, petrochemical operations, hazardous material clean-up and remediation, CWA incineration, remediation and disposal.







Zytron 500ASTM F1001 Chemical Test Battery*

	rest battery
Chemical	Minutes
Acetone	>480
Acetonitrile	>480
Carbon Disulfide	>480
Dichloromethane	>480
Diethylamine	>480
Dimethylformamide	>480
Ethyl Acetate	>480
n - Hexane	>480
Methyl Alcohol	>480
Nitrobenzene	>480
Sodium Hydroxide	>480
Sulfuric Acid	>480
Tetrachloroethylene	>480
Tetrahydrofuran	>480
Toluene	>480
Gases	
Ammonia Gas	>480
1,3 Butadiene Gas	>480
Chlorine Gas	>480
Ethylene Oxide Gas	>480
Hydrogen Chloride Gas	>480
Methyl Chloride Gas	>480

Chemical Agent	Minutes	Criteria
Bis (2-chloroethyl) sulfide (Mustard:HD)	>480	4.0 ug/cm2
Isopropyl methylfluorophosphonate (Sarin:GB)	>480	1.25 ug/cm2
Chlorovinyl arsinedichloride (Lewisite:L)	>480	4.0 ug/cm2
O-ethyl S-(2-diisopropylaminoethyl) methylphosphonothiolate (Nerve:VX)	>480	1.25 ug/cm2

* Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. **Chemical Warfare Agent testing was conducted in accordance with MIL-STD-282 and/or NFPA 1994-2001 with breakthrough times reported based on total cumulative permeation. For detailed technical data and physical properties see page 30 or visit kappler.com.



Frontline® Chemical/FR Protection

Frontline 300

Splash-And-Flash Protection For Petrochemical Environments.

- Three-way protection for chemical, flash-fire and radiant heat.
- Ideal for petrochemical line break operations – developed with input from petrochemical safety officers.
- Proven with demanding Pyroman Thermal Manikin testing.
- Multi-use, single-exposure garment provides economical alternative to expensive reusable FR apparel.
- Coverall and ensemble styles offer flexibility for a wide variety of work situations.
- Applications: Line maintenance, tank cleaning, refueling situations, clandestine lab response.







Frontline 300 ASTM F1001 Chemical Test Battery*

Chemical	Minutes
Acetone	>480
Acetonitrile	>480
Carbon Disulfide	>480
Dichloromethane	10
Diethylamine	>480
Dimethylformamide	>480
Ethyl Acetate	>480
n - Hexane	>480
Methyl Alcohol	>480
Nitrobenzene	>480
Sodium Hydroxide	>480
Sulfuric Acid	>480
Tetrachloroethylene	>480
Tetrahydrofuran	>480
Toluene	>480
Gases	
Ammonia Gas	>480
1,3 Butadiene Gas	>480
Chlorine Gas	>480
Ethylene Oxide Gas	>480
Other Chemicals Tested	
Benzene	>480
Diesel Fuel	>480
Diethylethanolamine	>480
Gasoline	>480
Hydrofluoric acid (48%)	>480
Kerosene	>480
Methanol	>480

^{*} Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. For detailed technical data and physical properties see page 30 or visit kappler.com.





ChemScan® labels – quick, accurate and only from Kappler.
Scan the label with your phone's OR reader for a complete list of

Scan the label with your phone's QR reader for a complete list of chemicals tested against your garment's protective fabric.

Frontline garments are designed for chemical flash-fire protection FOR ESCAPE ONLY in the event of

a chemical flash fire.

Frontline® 300

Frontline® Chemical/FR Protection

Frontline 500

NFPA 1991 Certified Apparel For Chemical Flash-Fire Protection.

- Single suit provides three-way protection – chemical, flash-fire and radiant heat protection.
- Single garment eliminates need for two-suit NFPA 1991 configuration.
- Provides excellent "survivability" performance – 0% body burn in Pyroman Thermal Manikin testing.
- NFPA-certified multi-use, single-exposure garment provides economical alternative to expensive FR reusables.
- Applications: Hazmat response and chemical handling with potential for chemical flash-fire.







Frontline 500 ASTM F1001 Chemical Test Battery*

Chemical	Minutes
Acetone	>480
Acetonitrile	>480
Carbon Disulfide	>480
Dichloromethane	253
Diethylamine	>480
Dimethylformamide	>480
Ethyl Acetate	>480
n - Hexane	>480
Methyl Alcohol	>480
Nitrobenzene	>480
Sodium Hydroxide	>480
Sulfuric Acid	>480
Tetrachloroethylene	>480
Tetrahydrofuran	>480
Toluene	>480
Gases	*
Ammonia Gas	>480
1,3 Butadiene Gas	>480
Chlorine Gas	>480
Ethylene Oxide Gas	>480
Hydrogen Chloride Gas	>480
Methyl Chloride Gas	>480

Chemical Warfare Agent Data**		
Chemical Agent	Minutes	Criteria
Bis (2-chloroethyl) sulfide (Mustard:HD)	>480	4.0 ug/cm2
lsopropyl methylfluorophosphonate (Sarin:GB)	>480	1.25 ug/cm2
Chlorovinyl arsinedichloride (Lewisite:L)	>240	4.0 ug/cm2
O-ethyl S-(2-diisopropylaminoethyl) methylphosphonothiolate (Nerve:VX)	>480	1.25 ug/cm2

^{*} Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. **Chemical Warfare Agent testing was conducted in accordance with MIL-STD-282 and/or NFPA 1994-2001 with breakthrough times reported based on total cumulative permeation. For detailed technical data and physical properties see page 30 or visit kappler.com.





FOR ESCAPE ONLY in the event of

a chemical flash fire.



ChemTape®

ChemTape is Kappler's patented chemical-resistant tape designed specifically for protective apparel. Provides added assurance for taping around gloves, boots, respirators and storm flaps, plus shelter-in-place applications. Rolls are 2" X 60 yd (48 mm wide and 55 meters long); 24 rolls per case. Style 99402 YW.

ChemTape® Responder ID Kit

Large, easy-to-read identification numbers enhance safety where worker identities are obscured. Self-adhesive, easy to apply, complete set includes numbers 0-9. 24 sets per case. Style 99415.



ChemTape ASTM F1001 Chemical Test Battery*

	,
Chemical	Minutes
Acetone	>480
Acetonitrile	>480
Carbon Disulfide	>480
Dichloromethane	>480
Diethylamine	160
Dimethylformamide	>480
Ethyl Acetate	>480
n - Hexane	>480
Methyl Alcohol	>480
Nitrobenzene	>480
Sodium Hydroxide	>480
Sulfuric Acid	>480
Tetrachloroethylene	>480
Tetrahydrofuran	>480
Toluene	>480

Chemical Warfare Agent Data**						
Chemical Agent	Minutes	Criteria				
Bis (2-chloroethyl) sulfide (Mustard:HD)	>480	4.0 ug/cm2				
lsopropyl methylfluorophosphonate (Sarin:GB)	>480	1.25 ug/cm2				
Chlorovinyl arsinedichloride (Lewisite:L)	NT	NT				
O-ethyl S-(2-diisopropylaminoethyl) methylphosphonothiolate (Nerve:VX)	>480	1.25 ug/cm2				

* Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes. **Chemical Warfare Agent testing was conducted in accordance with MIL-STD-282 and/or NFPA 1994-2001 with breakthrough times reported based on total cumulative permeation.

Accessory and specialty products continue through page 28. For a complete list of Kappler accessories or additional details call customer service at 1.800.600.4019.



Kappler's Digital Pressure Test Kit Is Flexible, Easy To Use And Extremely Accurate.

Kappler's automated Digital Pressure Test Kit improves the efficiency and accuracy of gas-tight garment tests for both ASTM and CE methods. Our unique design features a digital readout for more accurate testing, while a large LCD touchscreen allows easy test criteria selection and data input. All fittings and hoses are included – the user simply provides a Grade D air supply with a 1/4 inch NPT fitting. Press START and the test is performed automatically, allowing the user to handle other duties while the test is in process. For easy and accurate record-keeping, test data can be copied to the provided USB stick via the built-in USB port. Style AKMOC.

A video of the test procedure and data formatting program can be found online at kappler.com/resources under "Training Videos."

2N1° Glove System Eliminates Inner Glove Inversion.

Kappler's 2N1® Glove System – a true innovation that eliminates the problem of inner glove inversion when the user removes a hand from the double-glove configuration common to gas-tight garments. This allows the user to easily remove or reinsert the hands into the glove without the annoying inversion. This is especially helpful when a user needs to free the hands inside the suit to adjust the respirator face piece, or access communication system or other equipment. The 2N1 Glove System also provides improved comfort and manual dexterity with a unique glove configuration. Contact Customer Service for style options.

The 2N1 Glove System is available on Kappler Zytron® 500 Hazmat styles and NFPA Certified styles in both Zytron® 300, 500 and Frontline® 500 fabrics.



Accessories And Specialty Products

Zytron[®] 300 Half C Jacket

Kappler's Zytron 300 Half C Jacket is ideal for supplied-air work applications. The flat back design includes hood with PVC faceshield, double storm flaps with hook and loop fasteners and attached CP Cuff Option for easy glove taping. Loops for air system attached inside the hood. Style Z3H763 (Z3H763-30 includes tubes and Nupro valve), 6 garments per case.



Male Glove Insert Cones

Kappler's insert cones interface glove to suit and provide smooth taping surface. 1 pair per case, style AGOAR.



Decon Shower

Kappler's patented Decontamination Shower is made with Zytron 500 fabric to ensure hazardous material run-off is safely contained. The removable spray wand with adjustable shut-off valve and ergo-grip handle allow better water control during decon. Simple design and snap-lock components mean easy setup and take-down. Catch Basin w/ frame and shower wand, Style Z5HD0. Shower curtain and frame, Style Z5HD1.

CP Cuff Option For Any Suit

Taping gloves with ChemTape® has become standard procedure for good protection. Our CP Cuff Option, available on any Kappler taped seam chemical garment, makes the job faster, easier and more effective. Eliminate chemical burns on hands and wrists – ask Customer Service about adding the CP Cuff Option to your next apparel order.



Attached CP Cuff Option makes taping fast and easy.

Cooling Vest

The Kappler Cooling Vest with patented Phase Change Material is lightweight and provides hours of cooling. Available in two cooling-capacity sizes, in mesh or FR Cotton. Contact Customer Service for style numbers.



For a complete list of Kappler accessories or additional details call customer service at 1.800.600.4019.

Kappler Custom And Special Services















Don't See The Style You Need?

If you need something not shown in our standard styles, ask about Kappler's custom solutions. We offer many options to make your favorite style a perfect fit. Popular items include:

- Glove options, a Kappler specialty, can be added to any heat sealed/taped suit style; they include the 2N1® Glove System and permanently attached gloves (shown). (A)
- Fall protection harness pass-throughs for gas-tight suits. (**B**)
- Special pass-throughs and tool/equipment loops. (C)
- Air-fed hood. (**D**)
- CP Cuff Option. (E)


Whatever your application or hazard scenario calls for, Kappler can configure the apparel to meet your needs. Just contact Customer Service at 1.800.600.4019 or email customer service@kappler.com.

Need A Specific Chemical Tested? Ask About Our Free Testing Program.

If you need to document a Kappler fabric against a specific hazard not already in our database, we make it easy. We'll conduct third-party testing on your chemical, and if the fabric meets your requirements, you agree to purchase a standard minimum number of garments. For details contact Customer Service at 1.800.600.4019 or email customerservice@kappler.com.

Technical Data And Testing Details

A STATE OF THE PARTY OF THE PAR

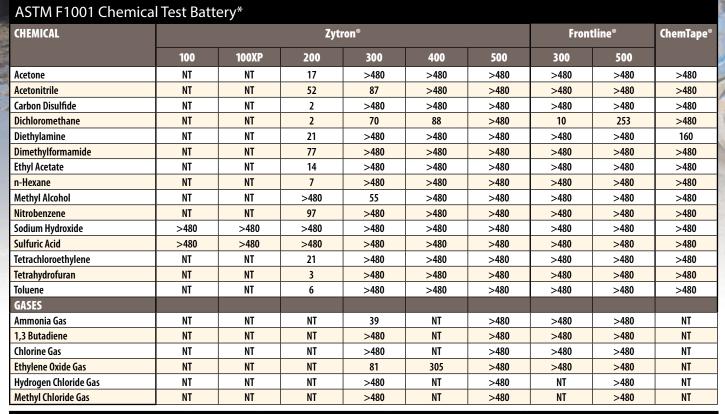

Chemical Warfare Agent Data**									
	Zytron°300				Frontline®500 Breakthrough		ChemTape° Breakthrough		
CHEMICAL AGENT Breakthrou		rough							
	Time	Criteria	Time	Criteria	Time	Criteria	Time	Criteria	
Bis (2-chloroethyl) sulfide (Mustard:HD)	>480	4.0 ug/cm ²	>480	4.0 ug/cm ²	>480	4.0 ug/cm ²	>480	4.0 ug/cm ²	
Isopropyl methylfluorophosphonate (Sarin:GB)	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	
Chlorovinyl arsinedichloride (Lewisite:L)	>240	4.0 ug/cm ²	>480	4.0 ug/cm ²	>240	4.0 ug/cm ²	NT	NT	
O-ethyl S-(2-diisopropylaminoethyl) methylphosphonothiolate (Nerve:VX)	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	>480	1.25 ug/cm ²	

^{*} Industrial chemical testing was conducted in accordance with ASTM F 739 with normalized breakthrough times reported in minutes.

Note: Sources for all chemical test data are independent laboratories. All tests were performed under laboratory conditions and not under actual use conditions. Tests were performed on material samples, not actual garments.

Kappler, Know What You're Getting Into, ProVent, Zytron, Frontline, ChemTape, HazMatch, 2N1, and ChemScan are trademarks of Kappler, Inc. AquaSeal is a trademark of YKK. Responder, Reflector, Pro/Shield, NexGen, SuitSmart and CPF are trademarks of E. I. du Pont de Nemours and Company. HazProof is a trademark of Tingley Rubber.



^{**} Chemical Warfare Agent testing was conducted in accordance with MIL-STD-282 and/or NFPA 1994-2001 with breakthrough times reported based on total cumulative permeation.

	Typical Physical Properties	Zytron° Frontline°					tline®		
#	TEST METHOD	100	100XP	200	300	400	500	300	500
1	Grab Tensile Strength MD* ASTM D751(lbs/N)	32 / 142	49 / 217	52 / 231	78 / 347	155 / 689	120/534	134 / 596	137 / 609.38
	Grab Tensile Strength CD* ASTM D751(lbs/N)	24 / 106	38 / 169	39 / 173	69 / 307	152 / 676	121 / 538	125 / 556	166 / 738.37
	Tear Resistance Trapezoid MD*(lbs/N) method details below**	11.5 / 51	17.4 / 77	22.9 / 101.8	16.6 / 74	42.2 / 188	35 / 156	13.7 / 60.94	13.5 / 60.05
200	Tear Resistance Trapezoid CD*(lbs/N) method details below**	7.4/32	10.3 / 45	9.6 / 42.7	22.1/98	50.6 / 225	37 / 168	10.7 / 44.79	14 / 62.27
1.5	Ball Burst ASTM D3787 (lbs/N)	28 / 124	46 / 204	43 / 191	58 / 258	153 / 681	128 / 569	123 / 547.10	134 / 596.03
	Flammability Resistance ASTM F1358	N/A	N/A	N/A	N/A	N/A	N/A	PASS	PASS

^{*}MD - Machine Direction, CD - Cross Direction

^{**}ASTM D1117 (Zytron 100, 200) ASTM D5587 (Zytron 300, 400, 500) ASTM D571 (Frontline 300, 500)



Frontline Pyroman Testing – The Inside Story On Survivability.

Because of Kappler's commitment to user survivability, Frontline garments designed to protect against a chemical flash-fire are subjected to intense testing in order to simulate real-world exposure. Chemical flash-fires are known to generate heat up to 1900° F. The Pyroman Thermal

Manikin test at North Carolina State University produces this environment for 6 seconds in order to predict a percentage of body burn a wearer might experience. Sensors on the manikin indicate not only the area of the body affected, but also predict severity of the burn. The Frontline 500 encapsulating suit performed exceptionally well in both measurements, with 0% body burn indicated. The Frontline 300 ensemble garment indicated less than 1% body burn. For more details contact Customer Service at 1.800.600.4019 or email customerservice@kappler.com.



Scan to see video.

Additional Frontline Testing Information – Frontline 300 and 500 Heat, Flame and Thermal Data

Frontline 300 and Frontline 500 have been tested for thermal protective performance (TPP) in accordance with ISO 17492, Clothing for Protection Against Heat and Flame. Frontline 300 showed a TPP value of 16, and Frontline 500 showed a TPP value of 32.

Both Frontline 300 and 500 meet the requirements for flame resistance in accordance with ASTM F1358.

Frontline 500 meets requirements of NFPA 1991, including base requirements plus optional Flash-Fire and Liquified Gas requirements.

Both Frontline 300 and 500 have been tested in accordance with ASTM F 1930-00 Standard Test Method for Evaluation of Flame Resistant Clothing for Protection Against Flash Fire Simulations Using an Instrumented Manikin. The Frontline 300 ensemble garment indicated less than 1% body burn after a three-second burn test, and the Frontline 500 indicated 0% body burn after a six-second test.

Check HazMatch® For Complete Chemical Test Results.

The details shown here represent only a fraction of the chemicals tested against Kappler fabrics – a list that's constantly being expanded. The latest list of chemicals in the Kappler database is always available via HazMatch – get the mobile app or use it online at kappler.com. If you don't see your specific chemical, see page 29 for details on Kappler's free testing program.



WARNING: This information is based on technical data that Kappler believes to be reliable. It is subject to revision as additional knowledge and experience are gained. The website will contain Kappler's most up-to-date product information, and customers who receive pamphlets, brochures or other literature should be aware that such "hard copy" information may not be as current as the information on Kappler's website. Customers also should recognize that there are uses, environments and chemicals for which Kappler products, garments and/or fabrics are unsuitable. It is the responsibility of the user to review available data and verify that the product, garment and/or fabric is appropriate for the intended use and meets all specified government and/or industry standards. Also, the customer should review all available information on the website to understand the uses – and limitations – on ALL products, garments and fabrics which Kappler makes available. **CAUTION:** Do not use for fire protection. Avoid open flame or intense heat.



When there's no room for guesswork, Kappler delivers the data and support you need.

Whether you're responding to a hazmat call or specifying protective apparel for a routine bid, Kappler helps you choose with confidence.

Our HazMatch® selection guide lets you search by chemical or by fabric and easily match a garment that's safe for your scenario. Use it online or get the free app for a quick, accurate recommendation.



ChemScan QR code garment label.

Got a suit but not sure if it's right for the hazard? Just scan the ChemScan®

QR code label for the latest test results for that specific fabric.

Our website is an excellent resource for everything from how-to videos to NFPA details. The Kappler University Road Show and Workshops offer comprehensive user education. And our no-nonsense Tech Support is just a phone call away at 1-800-600-4019.

At Kappler, the suit is just the beginning. The data – and how to use it – always lets you know what you're getting into.



Use HazMatch online at kappler.com or get the free app.





Protecting Workers, Protecting American Jobs.

We never forget that everyone who dons a Kappler suit has a family waiting at home. That's why we ensure every stitch, seam and piece of fabric meets stringent quality standards. Each garment is made with American pride by dedicated and skilled employees like those shown here. As you consider your options for protective apparel, we'd just like to say thanks – and remind you that Made In The USA is alive and well at Kappler.




Know What You're Getting Into.

800.600.4019 • kappler.com customerservice@kappler.com

Our Sizing System Reduces Inventory And Simplifies Your Selection Process.

Our garments are designed and constructed with the wearer in mind, and that includes sizing that simplifies the decision process. Typically worn over other clothing, Kappler's garments are designed so that "combination sizes" comfortably fit the vast majority of users. Plus, with only five size options (versus the normal eight), you simplify ordering logistics and reduce inventory requirements.

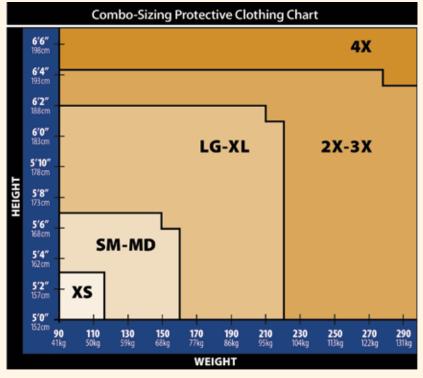

NOTE: Zytron 500 style Z5HTN C2 and certain Medical styles use specific sizing (XS, SM, MD, LG, XL, 2X, 3X, 4X and 5X). Please contact customer service for details.

WOSB PERTINENT CODES & INFORMATION

DUNS # 180036501 • **CAGE Code** 0WR15 • **EIN** 63-0943684 **NAICS Codes** 315210, 315220, 315280, 315990, 339113, 541715



Know What You're Getting Into.

Kappler, Inc.

P.O. Box 490 Shipping: 55 Grimes Drive Guntersville, Alabama 35976 Toll Free: 800.600.4019 Local: 256.505.4005 Fax: 256.505.4151 email: customerservice@kappler.com



Visit us on the web



