



SAFEWAZE

safewaze.com | (P) 800-230-0319 | (F) 704-262-9051
225 Wilshire Ave SW, Concord, NC 28025 USA

TECHNICAL DATA SHEET

FS902

Rescue Support Steps



Description	Safewaze™ rescue support steps are designed to relieve pressure and promote circulation until the fall victim is able to be rescued.
Instructions	Place the loop through the lower D-ring slot, closest to the webbing, and pull the bag through loop to cinch
Length	70" (1.78 m)
Maximum Working Load	400 lbs (140.61 kg)
Weight	0.25 lbs (0.11 kg)



safewaze.com | (P) 800-230-0319 | (F) 704-262-9051
225 Wilshire Ave SW, Concord, NC 28025

FS902 Rescue Support Steps

INSTALLATION / USAGE INSTRUCTIONS

WARNING!!!!

FAILURE TO READ AND UNDERSTAND THESE INSTALLATION INSTRUCTIONS MAY
RESULT IN SERIOUS INJURY OR DEATH


ENSURE THAT THE FS902 RESCUE SUPPORT STEPS HAVE NOT BEEN DAMAGED DURING SHIPPING PRIOR TO USE.

THE FS902 IS AN ENGINEERED PRODUCT. IF DAMAGED, IT MUST BE REMOVED FROM SERVICE AND MARKED FOR DISPOSAL.

SYNTHETIC STRAPS SHOULD NOT BE USED IN EXCESS OF 200° F TO AVOID DAMAGE FROM HEAT, WELDING SPLATTER/ SPARKS, AND CORROSIVE CHEMICALS.

IMPORTANT!!!!

CAREFULLY READ ALL INSTALLATION AND SPECIFICATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT.

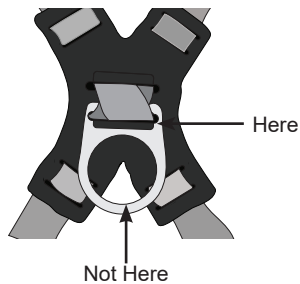


Installation

Place the fixed loop of the Rescue Support Steps through the slot in the Harness D-ring. Pull bag back through the loop and cinch it to the side of the D-ring slot.

Note: DO NOT attach to circular portion of D-ring.

Once a fall has occurred, open bag by pulling apart the velcro fastener on bottom of bag, or pulling on pullout loop, allowing the stirrup straps to be pulled out. Place feet in stirrups of the strap for support.

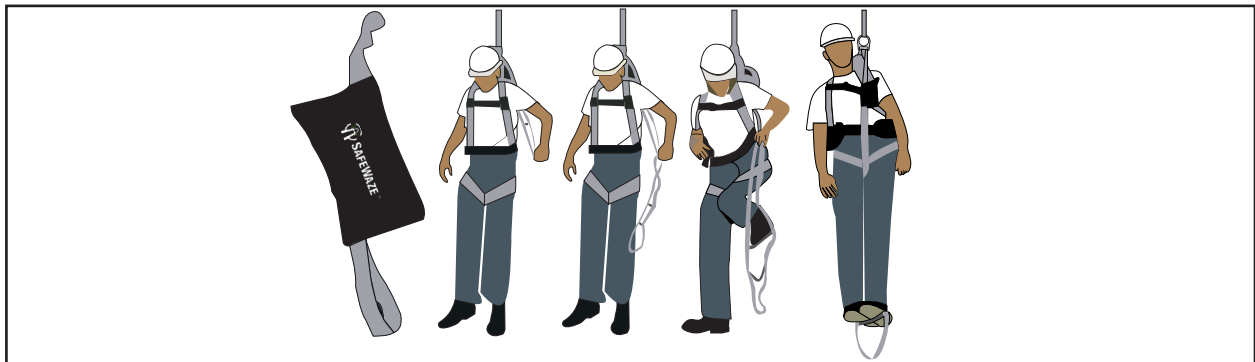

Inspection

All Rescue Support Steps must be inspected prior to each use.

All webbing must be inspected for tears, cuts, fraying, abrasion, discoloration, burns, holes, mold, or other signs of wear and damage.

All Rescue Support Steps must be free of corrosion, chemical exposure, alteration, excessive heating, or wear.

If inspection reveals any defect, inadequate maintenance, or unsafe condition, remove from service and mark for disposal.

Cleaning and Maintenance

Rescue support steps can be wiped down with a mild detergent and clean water solution, and rinsed with a dampened cloth to remove detergent. No maintenance is required for this product.